


BH-750

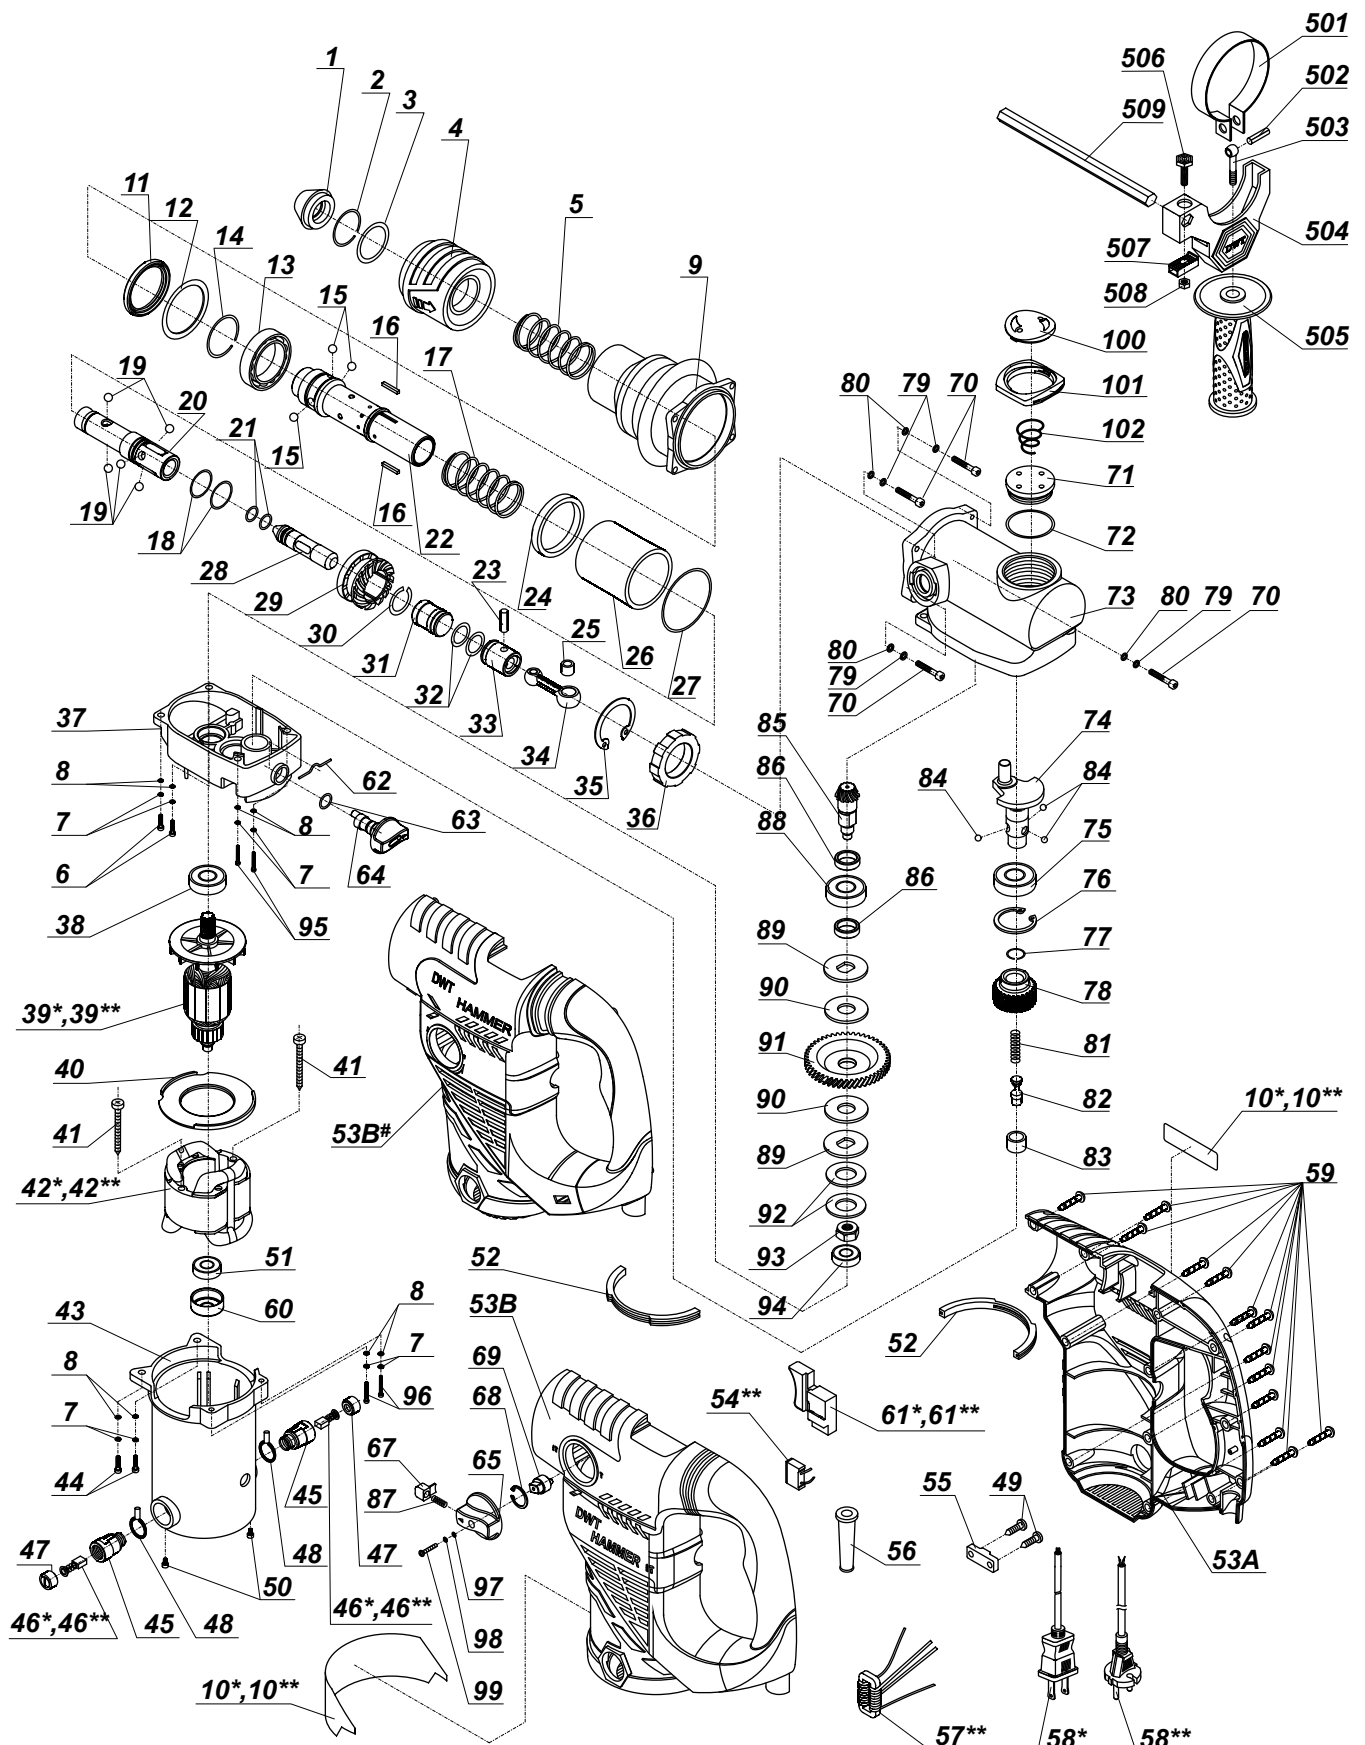

* - 127 V
 ** - 230 V

PRICE LIST OF SPARE PARTS

Pos.	Part Number	Description (Q-ty)	Description National Language (Q-ty)	Price, USD
1	M-017	Front cap		
2	S-119	Snap ring Ø19		
3	S-007	Washer Ø20		
4	N-040	Protection sleeve		
5	R-040	Spring Ø32x65		
6	S-058	Hex.screw M5x22 (2)		
7	S-024	Spring washer Ø5 (8)		
8	S-004	Washer Ø5 (8)		
9	G-005	Cylinder housing		
10*	1T-015	Brand label (2) 127 V (BH-750)		
10**	T-015	Brand label (2) 230 V (BH-750)		
11	M-023	Oil seal Ø35xØ46x7		
12	S-008	Washer Ø55xØ45x1.5		
13	O-018	Ball bearing 61907		
14	S-131	Snap ring Ø35		
15	R-008	Steel ball Ø7.94 (3)		
16	R-015	Flat key 3x18 (2)		
17	R-042	Spring Ø38x56		
18	M-046	"O" ring Ø24x2 (2)		
19	R-007	Steel ball Ø7.14 (5)		
20	K-022	Guard ring sleeve		
21	M-044	"O" ring Ø15x2 (2)		
22	K-016	Cylinder		
23	L-006	Piston pin		
24	M-010	Rubber ring Ø45xØ55		
25	O-037	Needle bearing HK0810		
26	R-027	Plastic bush Ø55x48		
27	M-043	"O" ring Ø60,5x2,5		
28	K-035	Second striker		
29	F-005	Cone gear		
30	S-130	Snap ring Ø28		
31	K-032	Striker		
32	M-047	"O" ring Ø24x3 (2)		
33	K-027	Piston		
34	K-044	Connecting rod		
35	S-121	Circlip for hole Ø47		
36	O-058	Oil bearing		
37	G-001	Gear housing		
38	O-009	Ball bearing 6001.2Z		
39*	1A-008	Armature 127V		
39**	A-008	Armature 230V		
40	I-005	Guide wind circle		
41	S-084	Screw ST4x50 (2)		
42*	1B-007	Stator 127V		
42**	B-007	Stator 230V		
43	H-006	Motor housing		
44	S-040	Screw M5x20 (2)		
45	J-021	Brush holder (2)		
46*	1D-011	Carbon brush (2) 127V		
46**	D-011	Carbon brush (2) 230V		
47	J-028	Brush cap (2)		
48	J-014	Connection spring Ø12.5 (2)		
49	S-075	Screw ST4x16 (2)		
50	S-036	Screw M5x6 (2)		

51	O-002	Ball bearing 608.2Z		
52	M-019	" U " Rubber gascet (2)		
53A	H-014	Housing A		
53B	H-024	Housing B		
54**	E-005	Condenser 0.22µF 230V		
55	M-002	Cord clip		
56	M-003	Rubber sleeve		
57**	E-008	Inductor 24x12x4 230V		
58*	1E-001	Cord 127V		
58**	E-001	Cord 230V		
59	S-077	Screw ST4x20 (13)		
60	M-007	Bearing bush Ø25xØ22x9		
61*	1C-006	Switch 127V		
61**	C-006	Switch 230V		
62	S-138	Steel clamp		
63	M-048	"O" ring Ø13x2		
64	I-010	Switch grip		
65	I-008	Switch knob		
67	I-013	Locating block		
68	S-107	Circlip for hole Ø15		
69	N-041	Knob grip		
70	S-060	Hex.screw M4x20 (4)		
71	N-001	Oil seal cap		
72	M-045	"O" ring Ø42x2		
73	G-009	Crank housing		
74	K-040	Crank shaft		
75	O-015	Ball bearing 6202.2Z		
76	S-114	Circlip for hole Ø35		
77	S-129	Snap ring Ø15x1,5		
78	F-008	First gear		
79	S-023	Spring washer Ø4 (4)		
80	S-001	Washer Ø4 (4)		
81	R-041	Spring Ø8x30		
82	N-029	Lifting pole		
83	O-038	Needle bearing HK1012		
84	R-064	Steel ball Ø5.5 (3)		
85	K-004	Third shaft gear		
86	N-035	Oil seal indent		
87	R-049	Knob spring Ø5x25		
88	O-010	Ball bearing 6002.2Z		
89	N-037	Pull board (2)		
90	N-038	Clutch facing (2)		
91	F-012	Second gear		
92	R-050	Dish form spring (2)		
93	S-068	Speciality nut		
94	O-004	Ball bearing 627.2Z		
95	S-042	Screw M5x35 (2)		
96	S-041	Screw M5x25 (2)		
97	S-002	Washer Ø3		
98	S-022	Spring washer Ø3		
99	S-028	Screw M3x20		
100	N-004	Oil seal cover		
101	N-006	Oil seal holder		
102	R-048	Cone spring B		
501	Q-008	Chuck ring		
502	Q-018	Elastic cylinder pin 6x20		
503	S-142	Slipknot bolt M8x45		
504	Q-004	Handle clip		
505	Q-002	Side handle		
506	S-061	Hex.head screw M6		
507	Q-017	Arresting lever fixed block		
508	S-065	Nut M6		
509	Q-022	Depth rod		