


## Exploded view

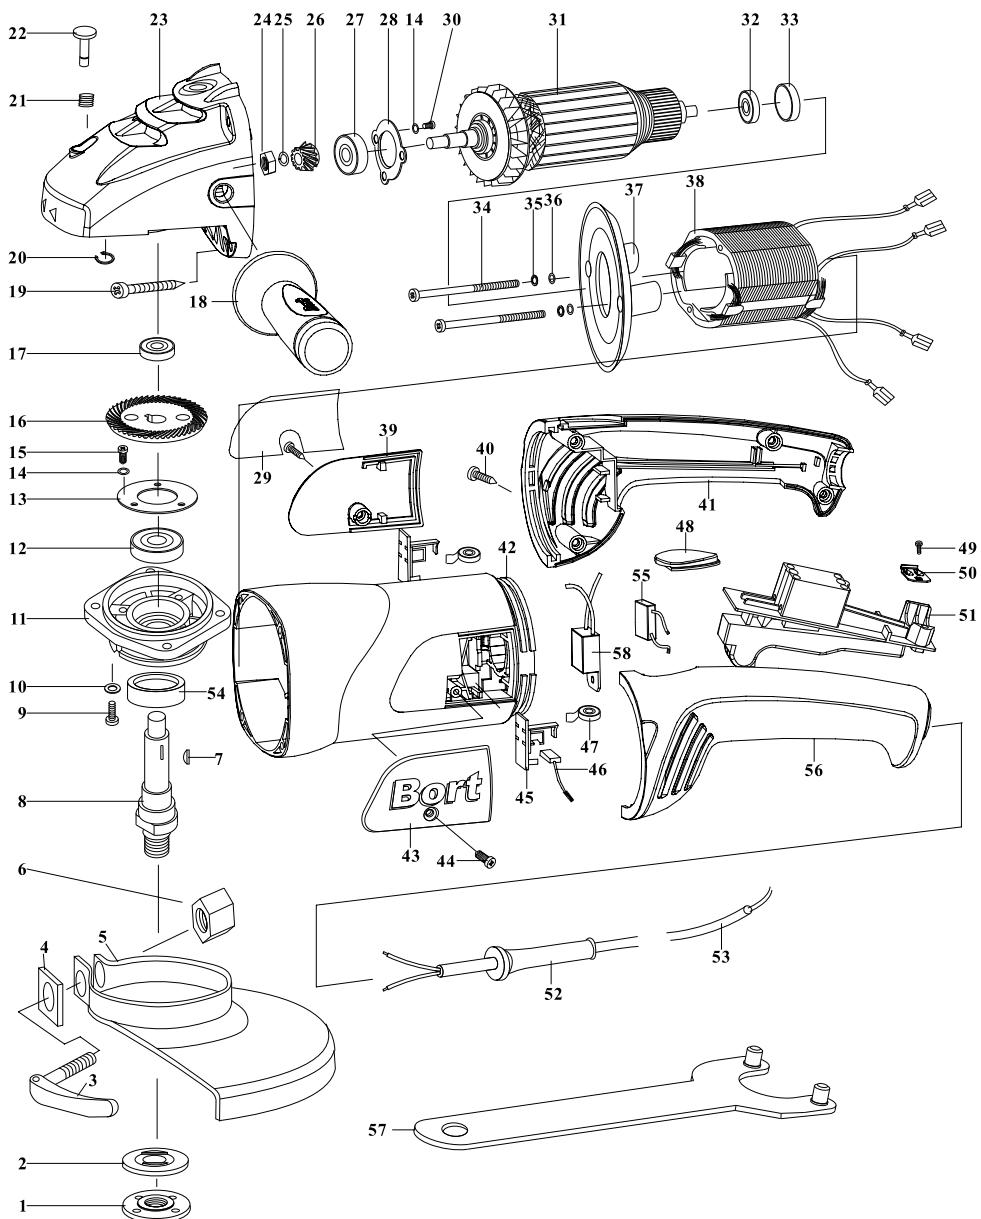

---

## Spare Parts list

No.	Part Name	No.	Part Name
1	Upper Flange	30	Screw
2	Lower Flange	31	Armature
3	Screw	32	Ball bearing
4	Washer	33	Bearing seat
5	Protection cover	34	Screw
6	Nut	35	Spring washer
7	Wood ruff-key	36	Washer
8	Spindle	37	Fan guard
9	Screw	38	Stator
10	Spring washer	39	Right brush cap
11	Front cap	40	Screw
12	Ball bearing	41	Right handle
13	Bearing cap	42	Housing
14	Spring washer	43	Left brush cap
15	Screw	44	Screw
16	Gear	45	Brush holder
17	Bearing	46	Carbon brush
18	Front handle	47	Brush spring
19	Screw	48	Rubber block
20	Checking ring	49	Screw
21	Spring	50	Cord clamp
22	Stop pin	51	Switch
23	Gear box	52	Cord sleeve
24	Nut	53	Cord and plug
25	Spring washer	54	Oil envelop
26	Small gear	55	Capacitor
27	Ball bearing	56	Left handle
28	Bearing cap	57	Wrench
29	Data plate	58	Soft start

---