


Exploded view

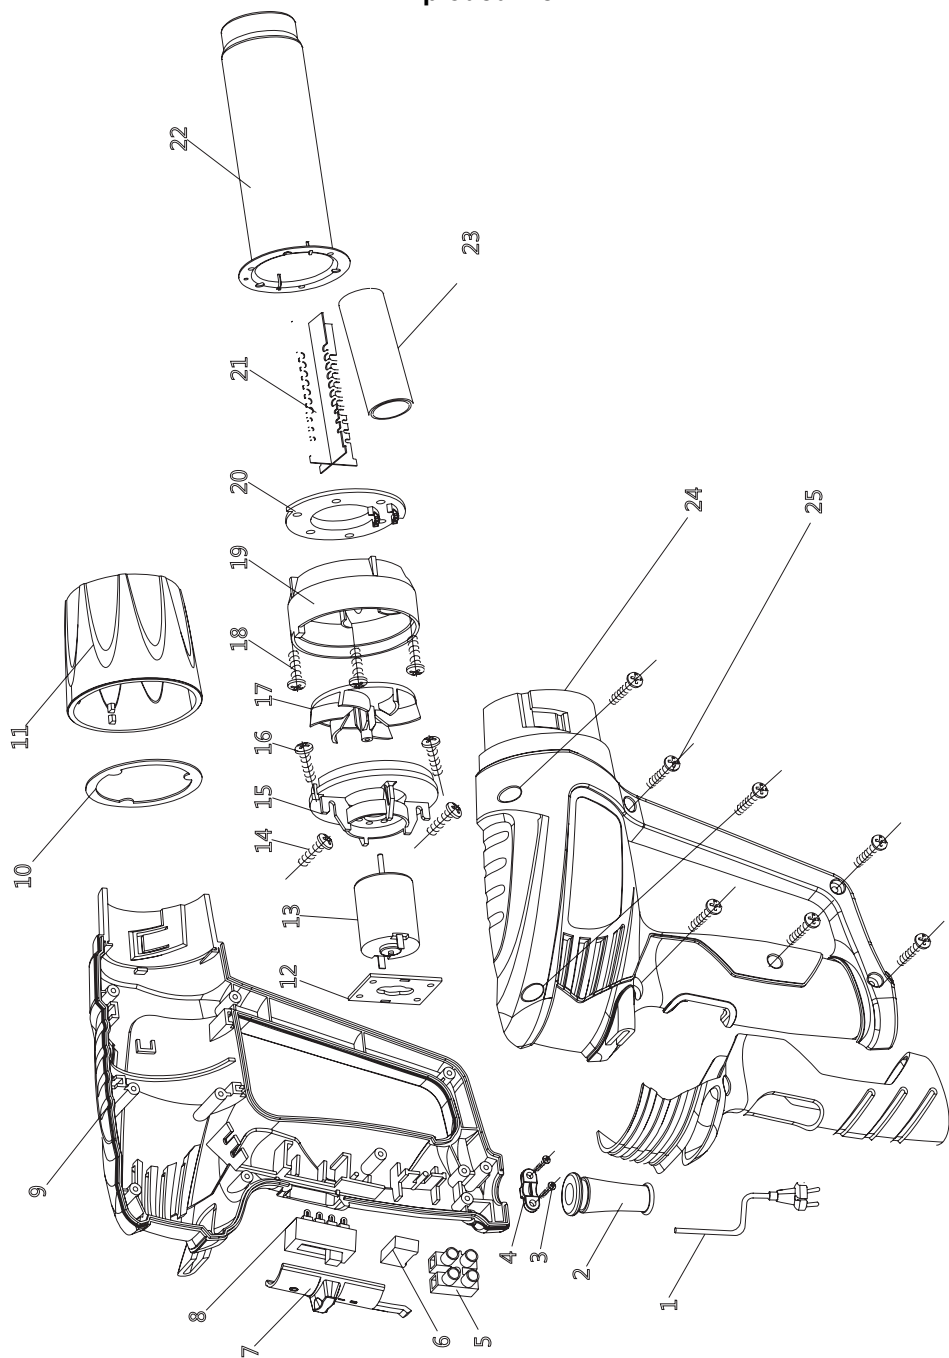

Spare parts list

Part No.	Part Name
1	Cord and plug
2	Cord sleeve
3	Screw
4	Cord clamp
5	Terminal board
6	Capacitor
7	Switch button
8	Switch
9	Bottom housing
10	Support ring
11	Barrel
12	PCB for motor
13	Motor
14	Screw
15	Motor support
16	Screw
17	Fan
18	Screw
19	Fan housing
20	Heat support
21	Mica heating
22	Metal barrel
23	Mica
24	Top housing
25	Screw
