


Exploded view BES-430

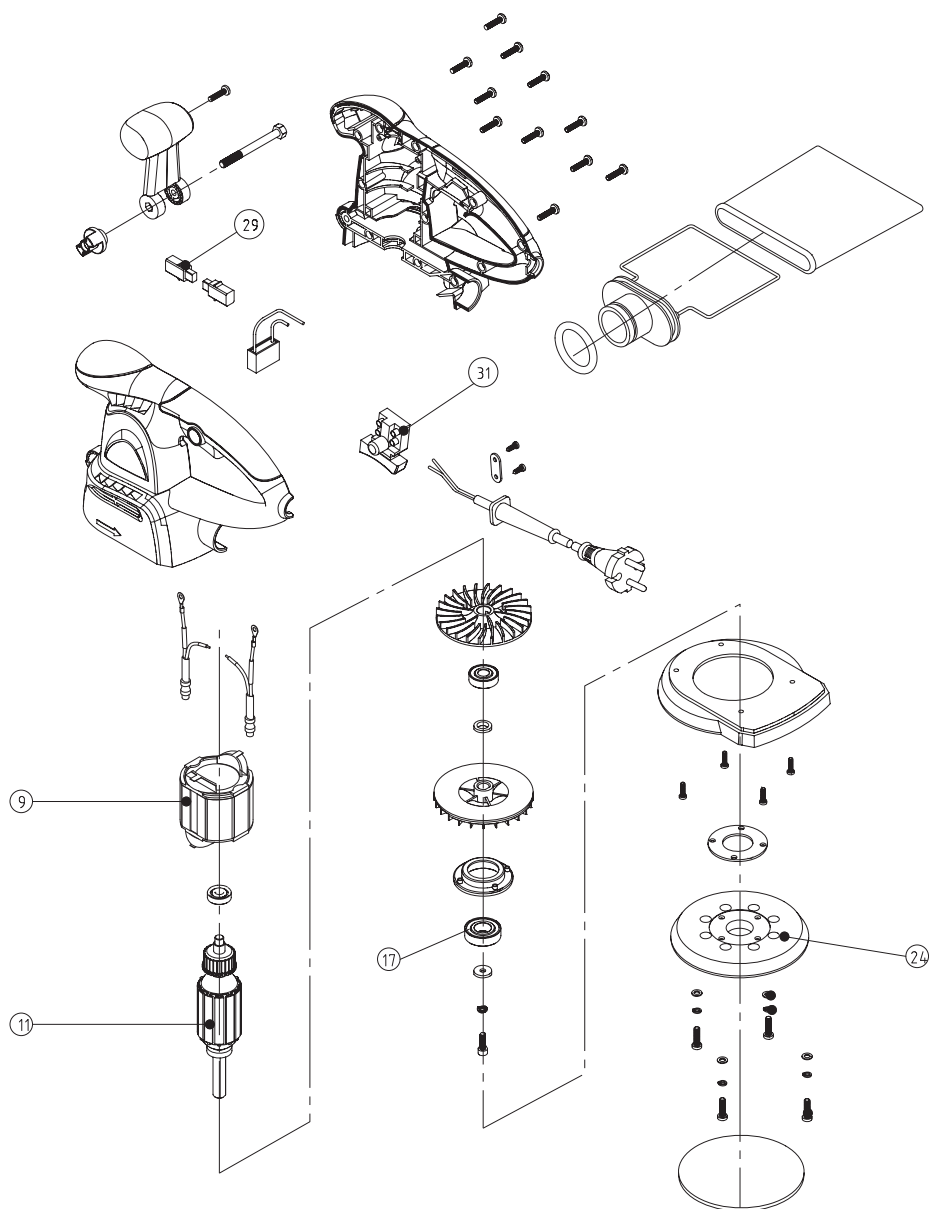

Spare parts list BES-430

No.	Part Name
-----	-----------

- | | |
|----|-------------------|
| 9 | Stator |
| 11 | Rotor |
| 17 | Bearing 6002RZ |
| 24 | Sole plate assy |
| 29 | Brush holder assy |
| 31 | Switch |