


Exploded view BSM-500-P

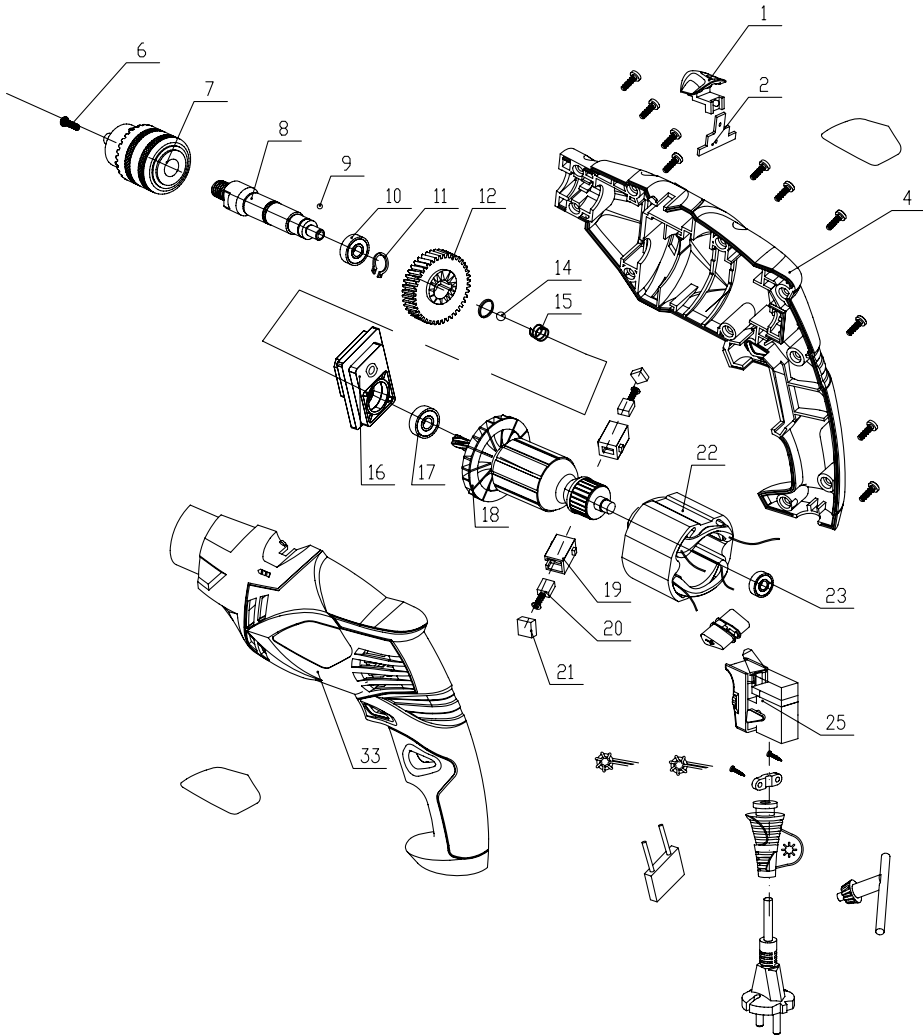

Spare parts list BSM-500-P

No.	Part Name
①	Impact botton
②	Mode Switch Plate
④	Right Housing
⑥	Chuck screw
⑦	Chuck
⑧	Output Spindle
⑨	Woodruff Key
⑩	Bearing
⑪	Circlip
⑫	Big gear
⑭	Steel ball
⑮	Spring
⑯	Impact patch
⑰	Bearing
⑱	Rotor
⑲	Brush Holder
⑳	Set of brushes
㉑	Brush holder cover
㉒	Stator
㉓	Bearing
㉕	Switch
㉗	Left housing