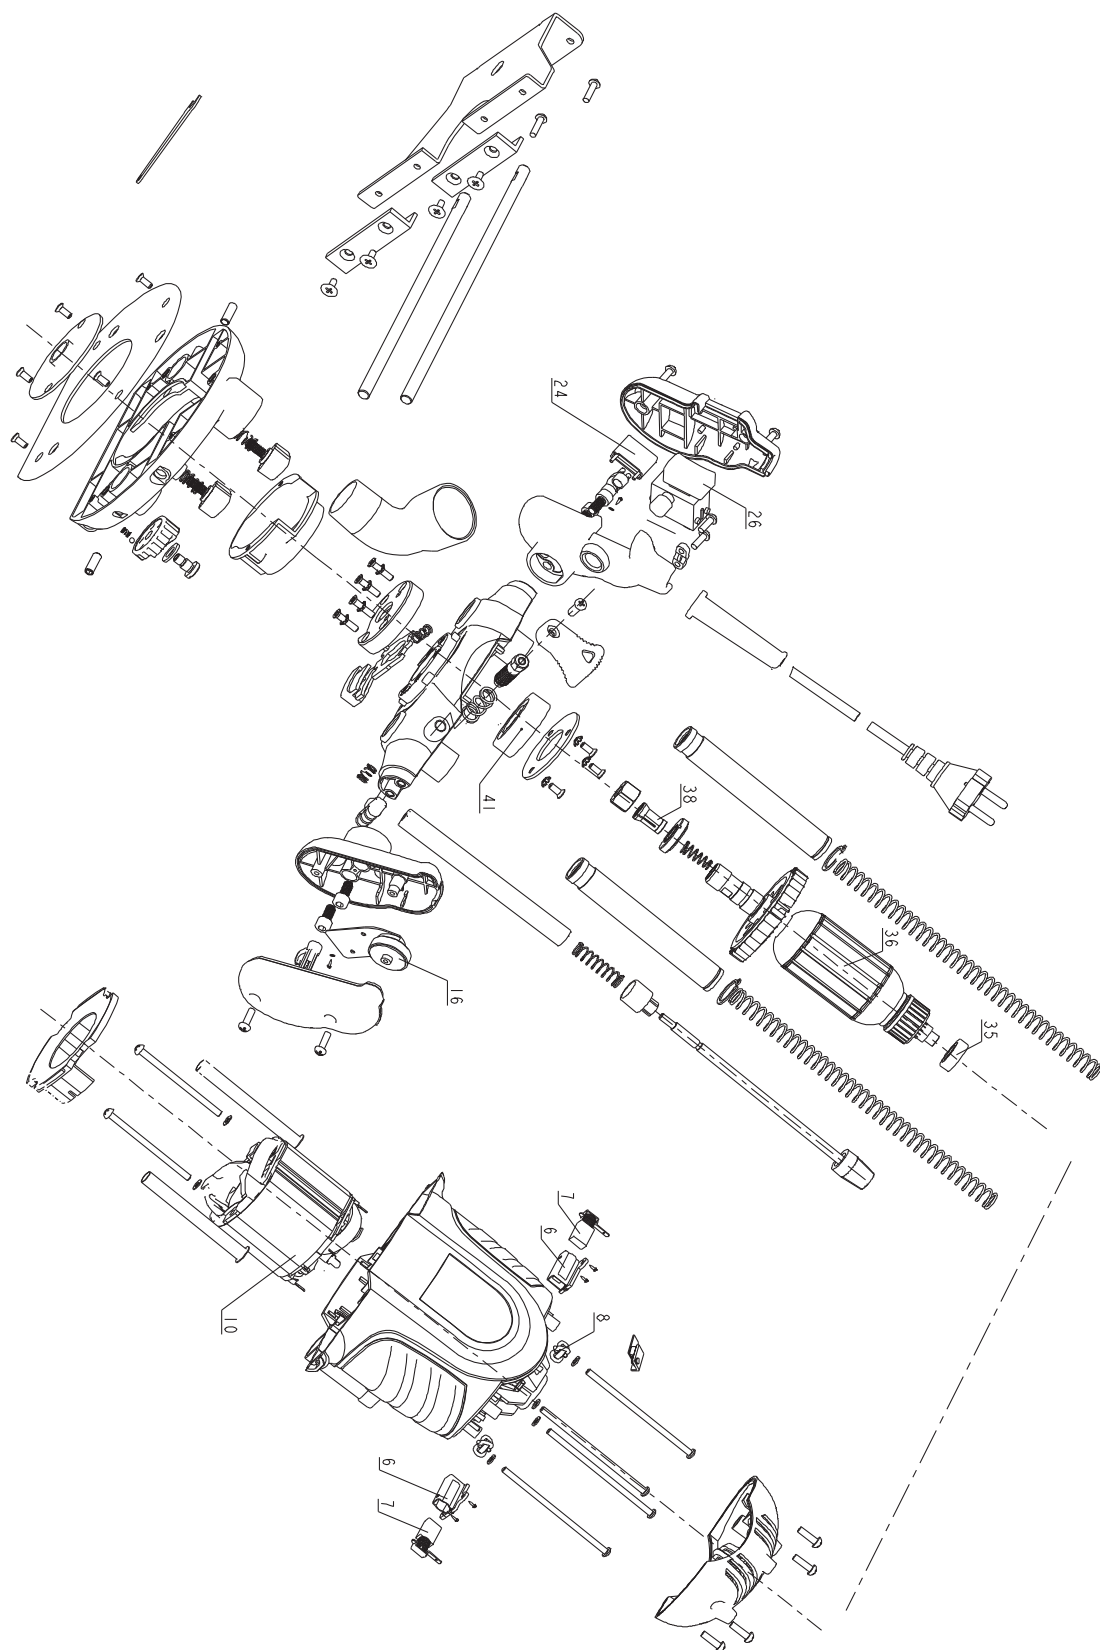

Exploded view BOF-1600N



Spare parts list BOF-1600N

No.	Part Name
6	Brush holder
7	Set of brushes
8	Inductance
10	Stator
16	Adjust speed
24	Capacitor
26	Switch
35	Bearing rotor 608-2Z
36	Rotor
38	Collet
41	Bearing rotor 6004-RS