


Exploded view

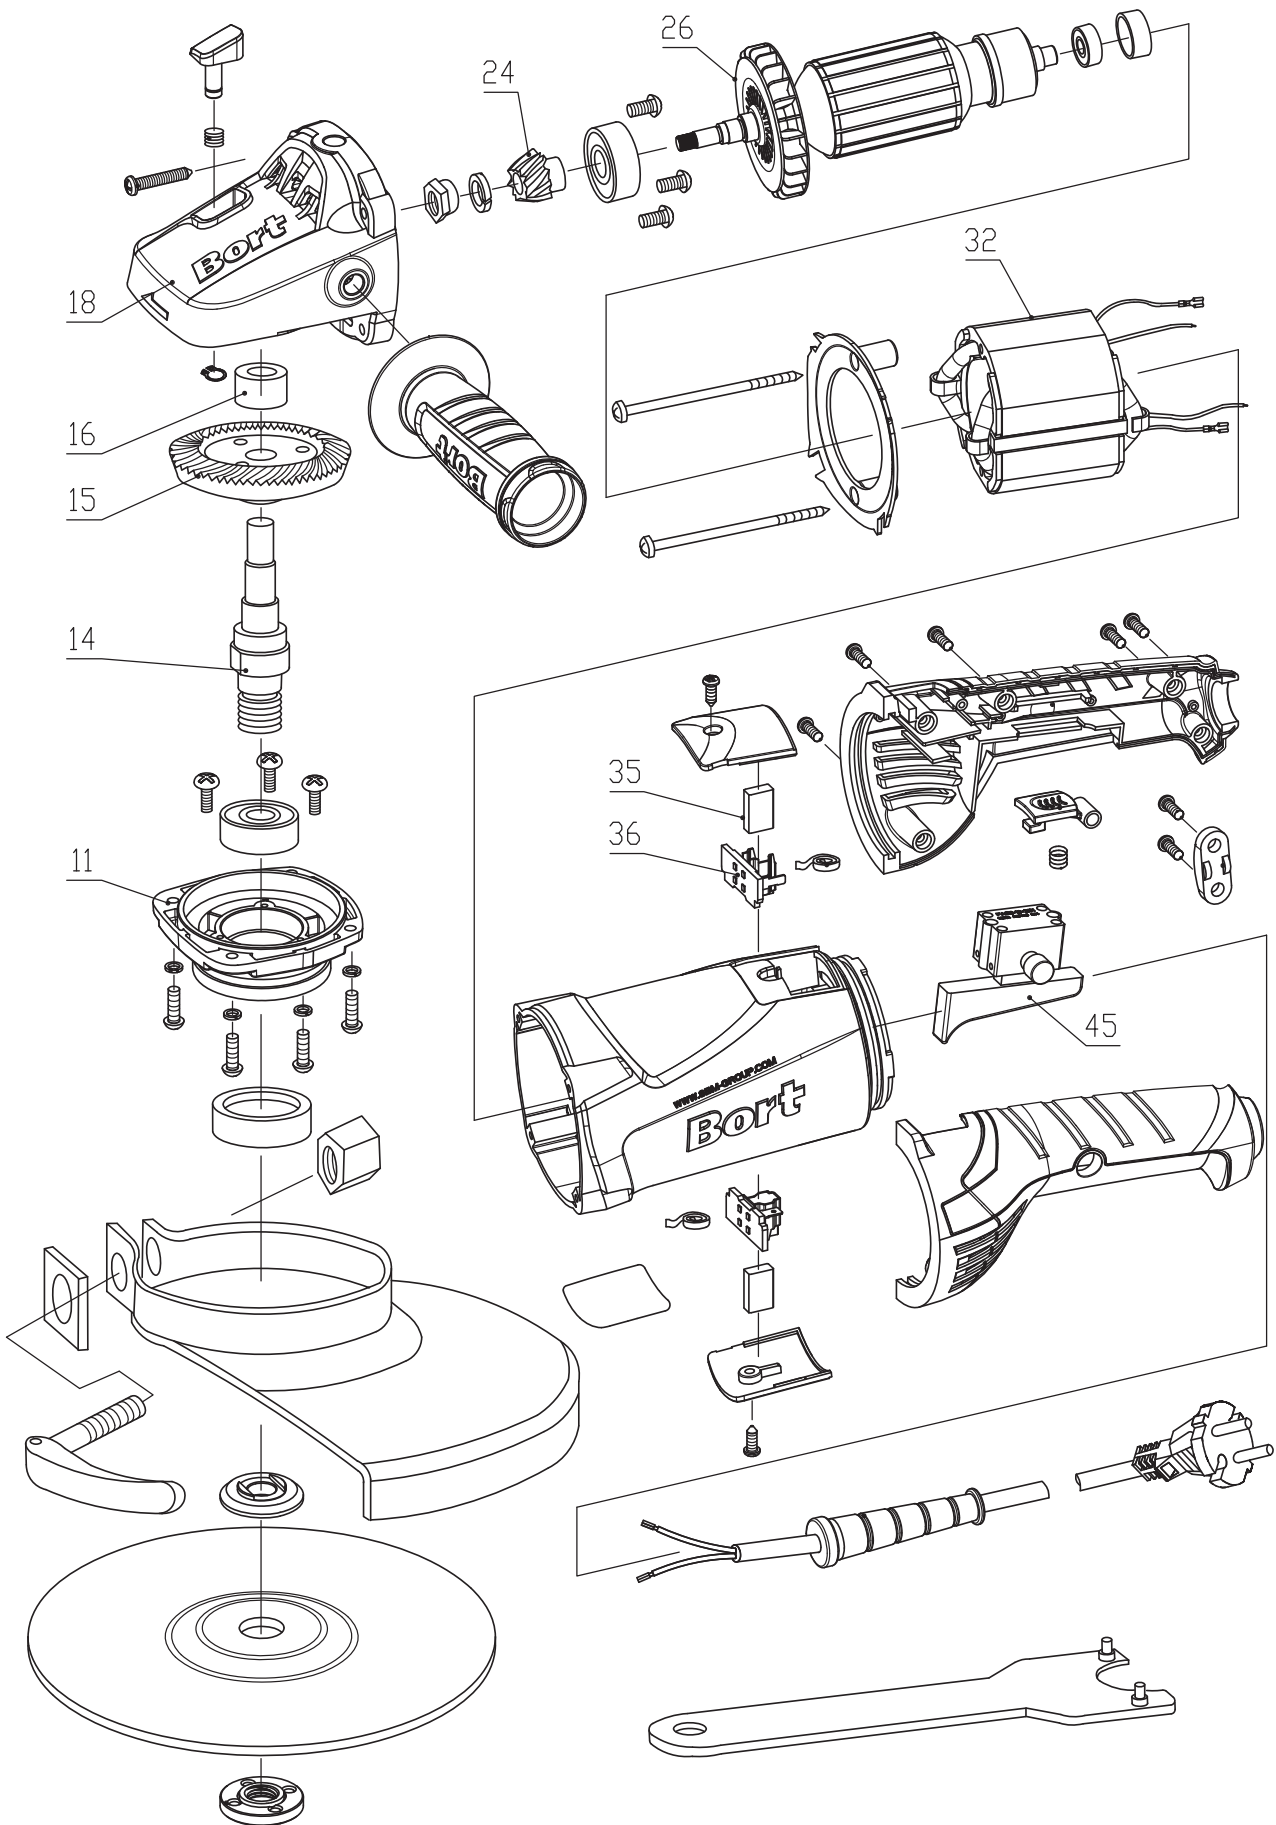

Parts List

Part No.	Spare Part name
11	Cover gear unit housing
14	Spindle
15	Gear
16	Bearing slip
18	Housing gearbox
24	Gear
26	Rotor
32	Stator
35	Set of brushes
36	Brush holder
45	Switch
52	Clamp assy