


Exploded view

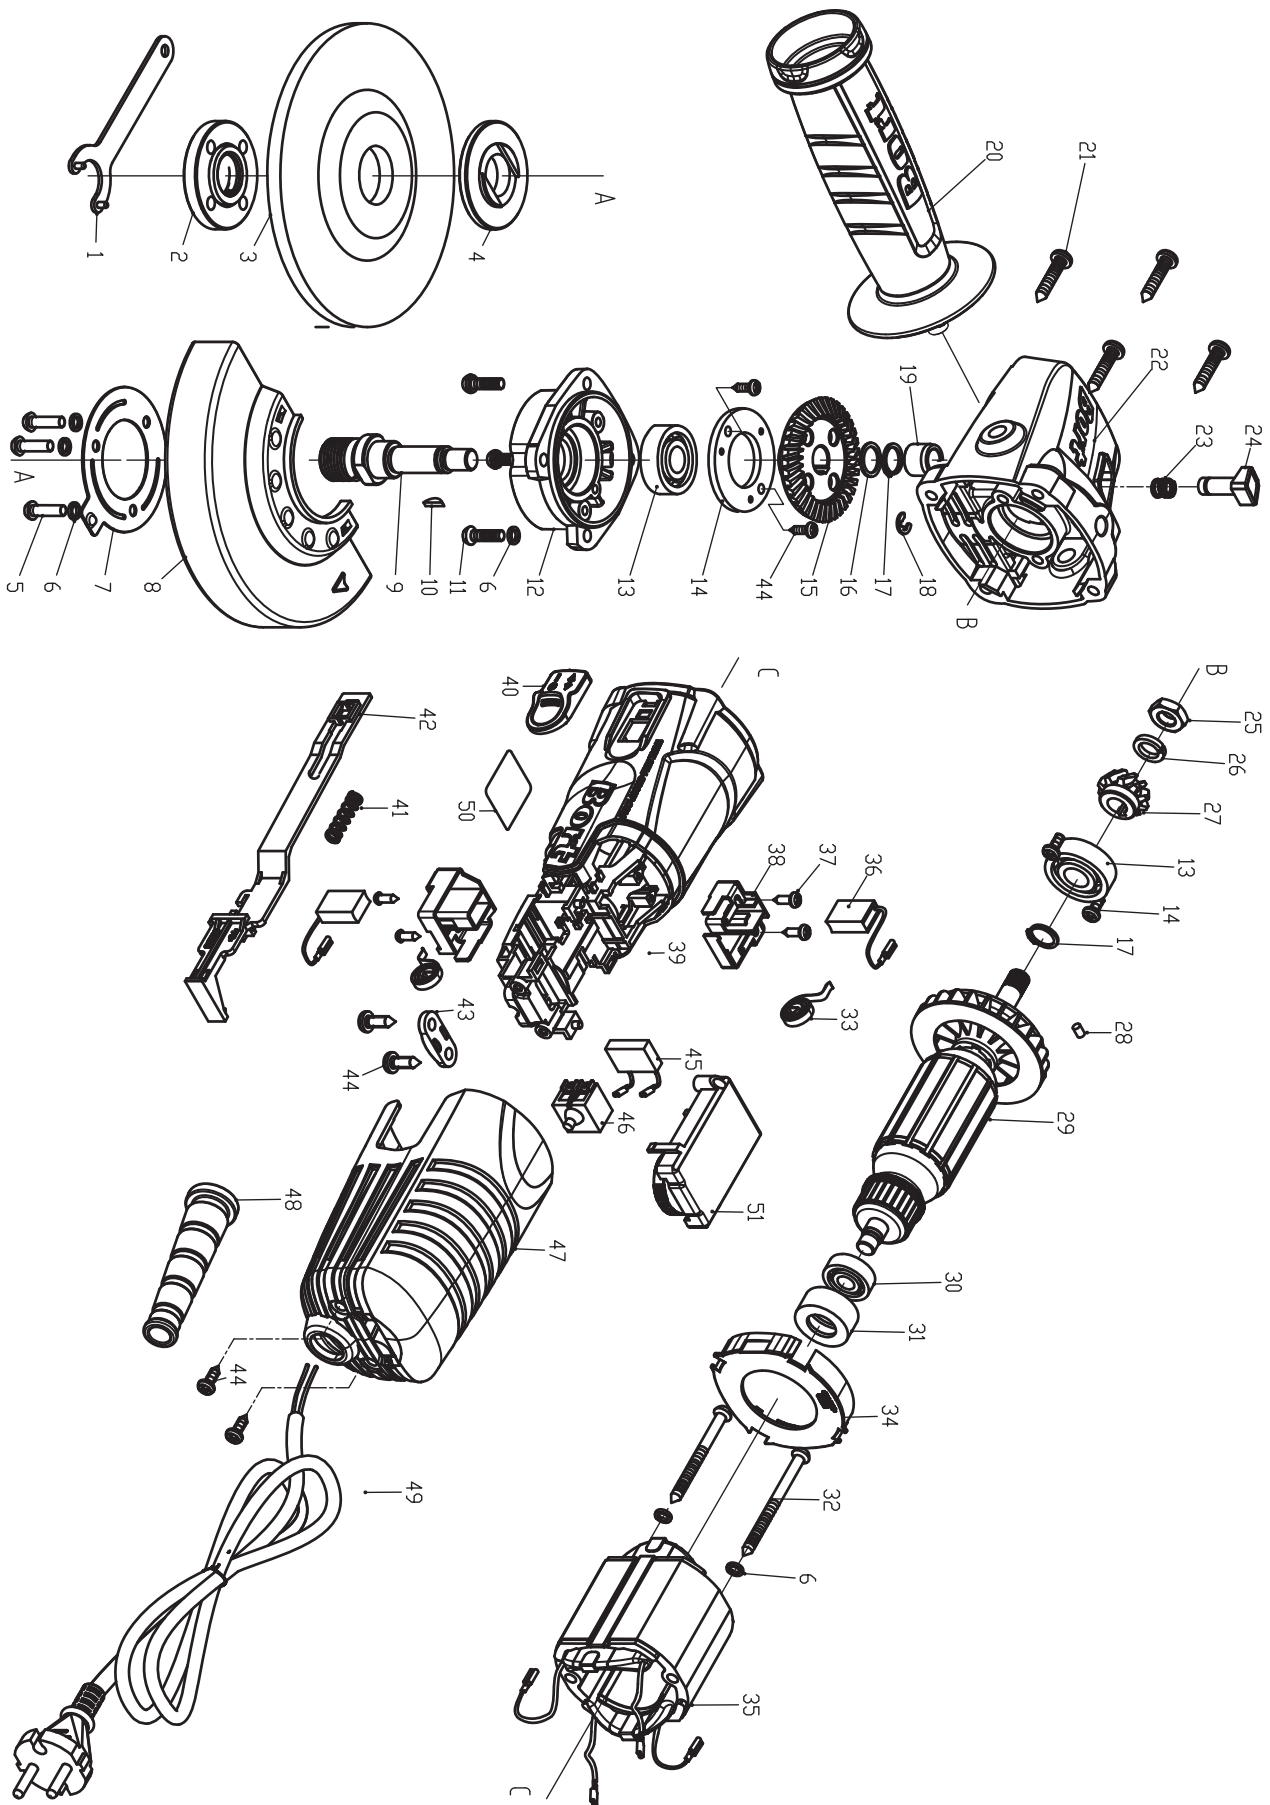

Spare parts list

No.	Part Name
9	Spindle
10	Key spindle
12	Cover gear unit housing
15	Gear
17	Locking ring
19	Bearing slip
22	Housing gearbox
27	Gear
28	Key
29	Rotor
35	Stator
36	Set of brushes
38	Brush holder
40	Button switch
42	Rod switch
46	Switch
51	Adjust speed
52	Clamp assy (pos. 18,23,24)