


# Exploded view

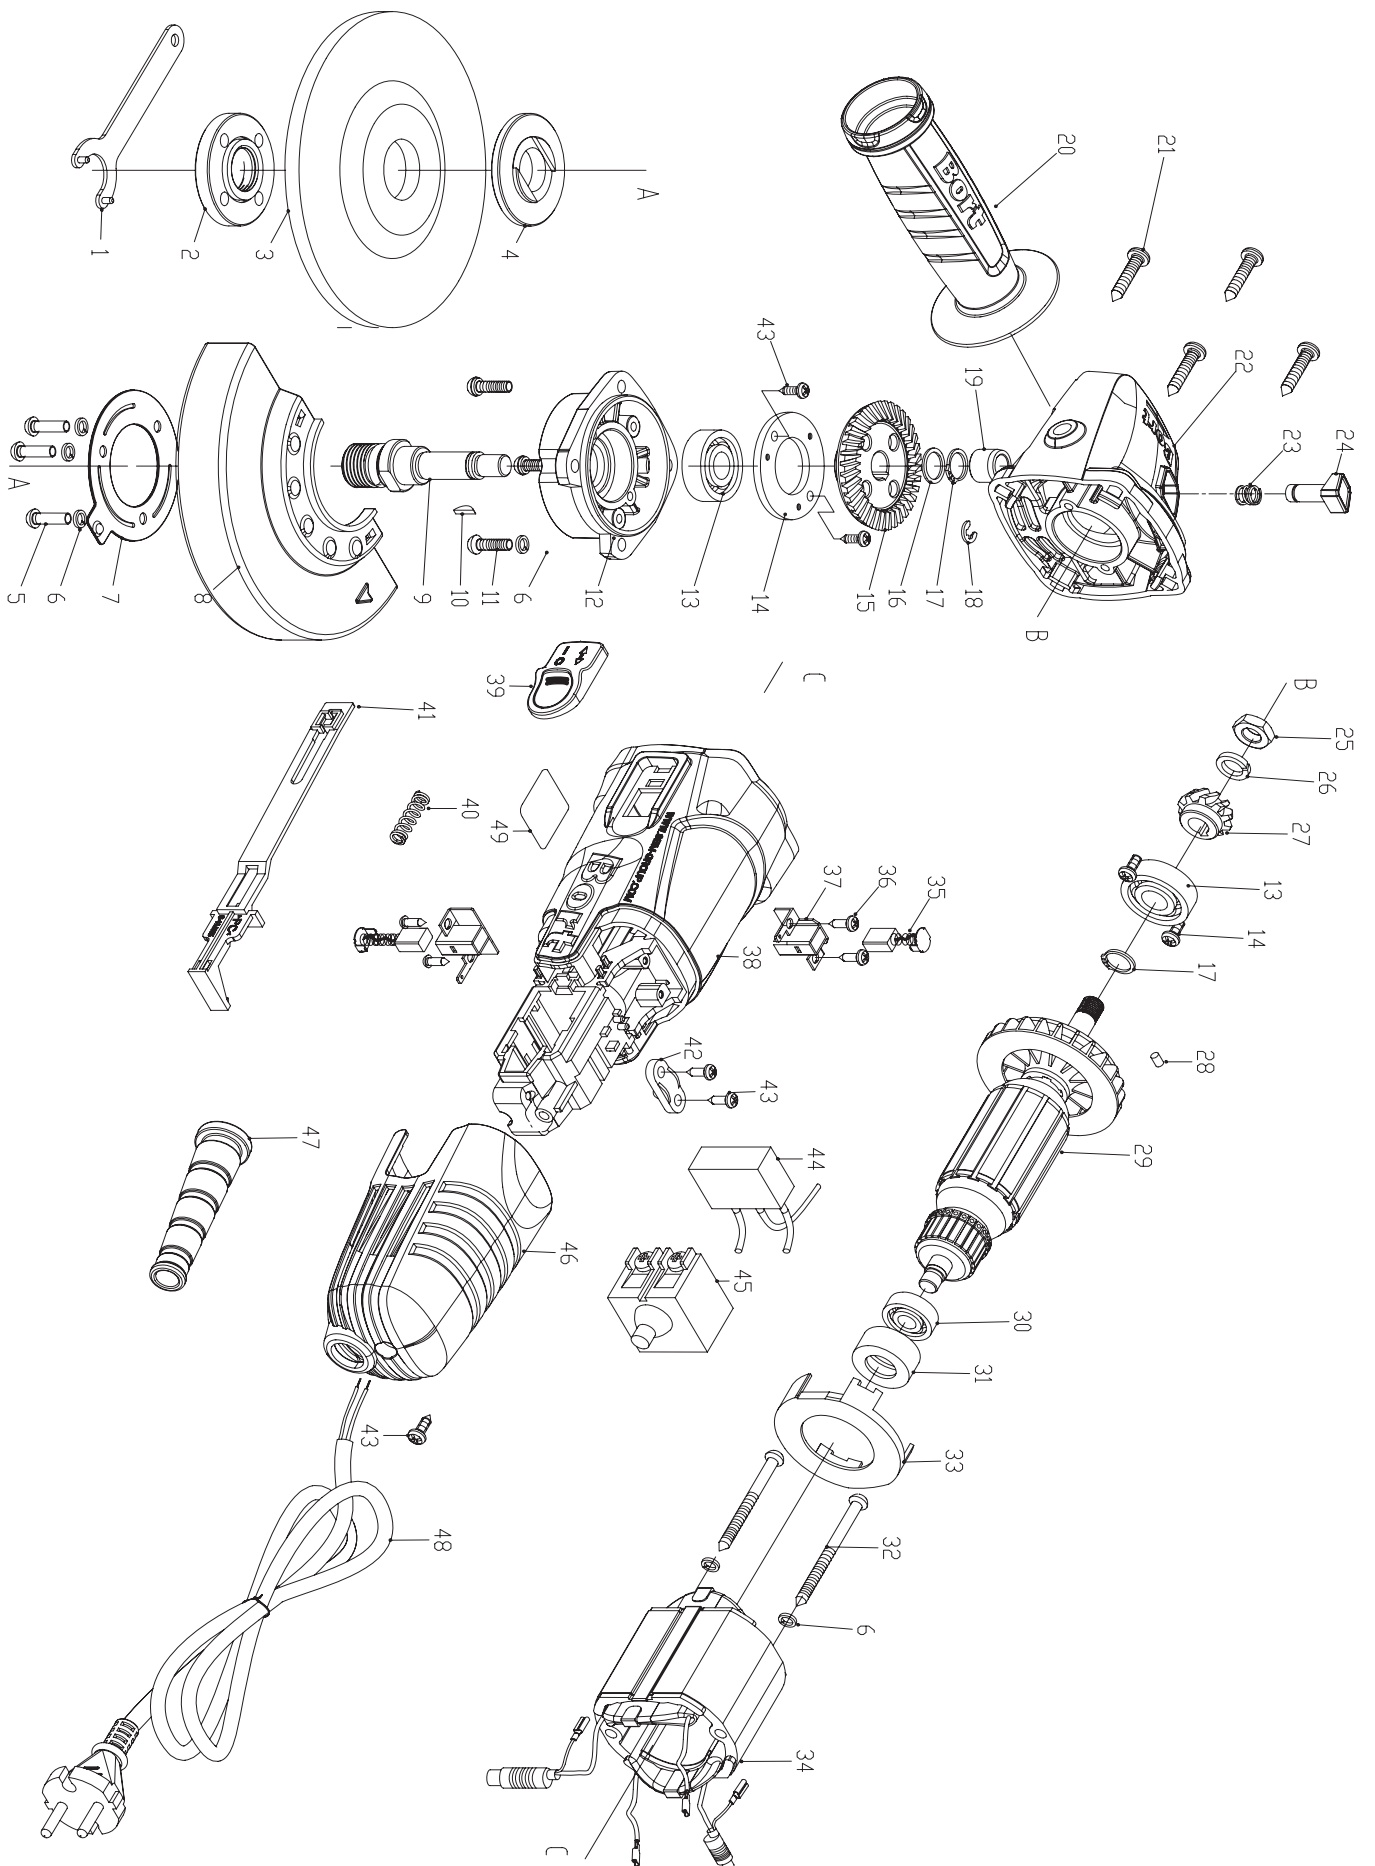

---

## Spare parts list

No.	Part Name
9	Spindle
10	Key spindle
12	Cover gear unit housing
15	Gear
17	Locking ring
19	Bearing slip
22	Housing gearbox
27	Gear
28	Key
29	Rotor
34	Stator
35	Set of brushes
37	Brush holder
39	Button switch
41	Rod switch
45	Switch
50	Clamp assy (pos. 18,23,24)