


Exploded view BWS-500-P

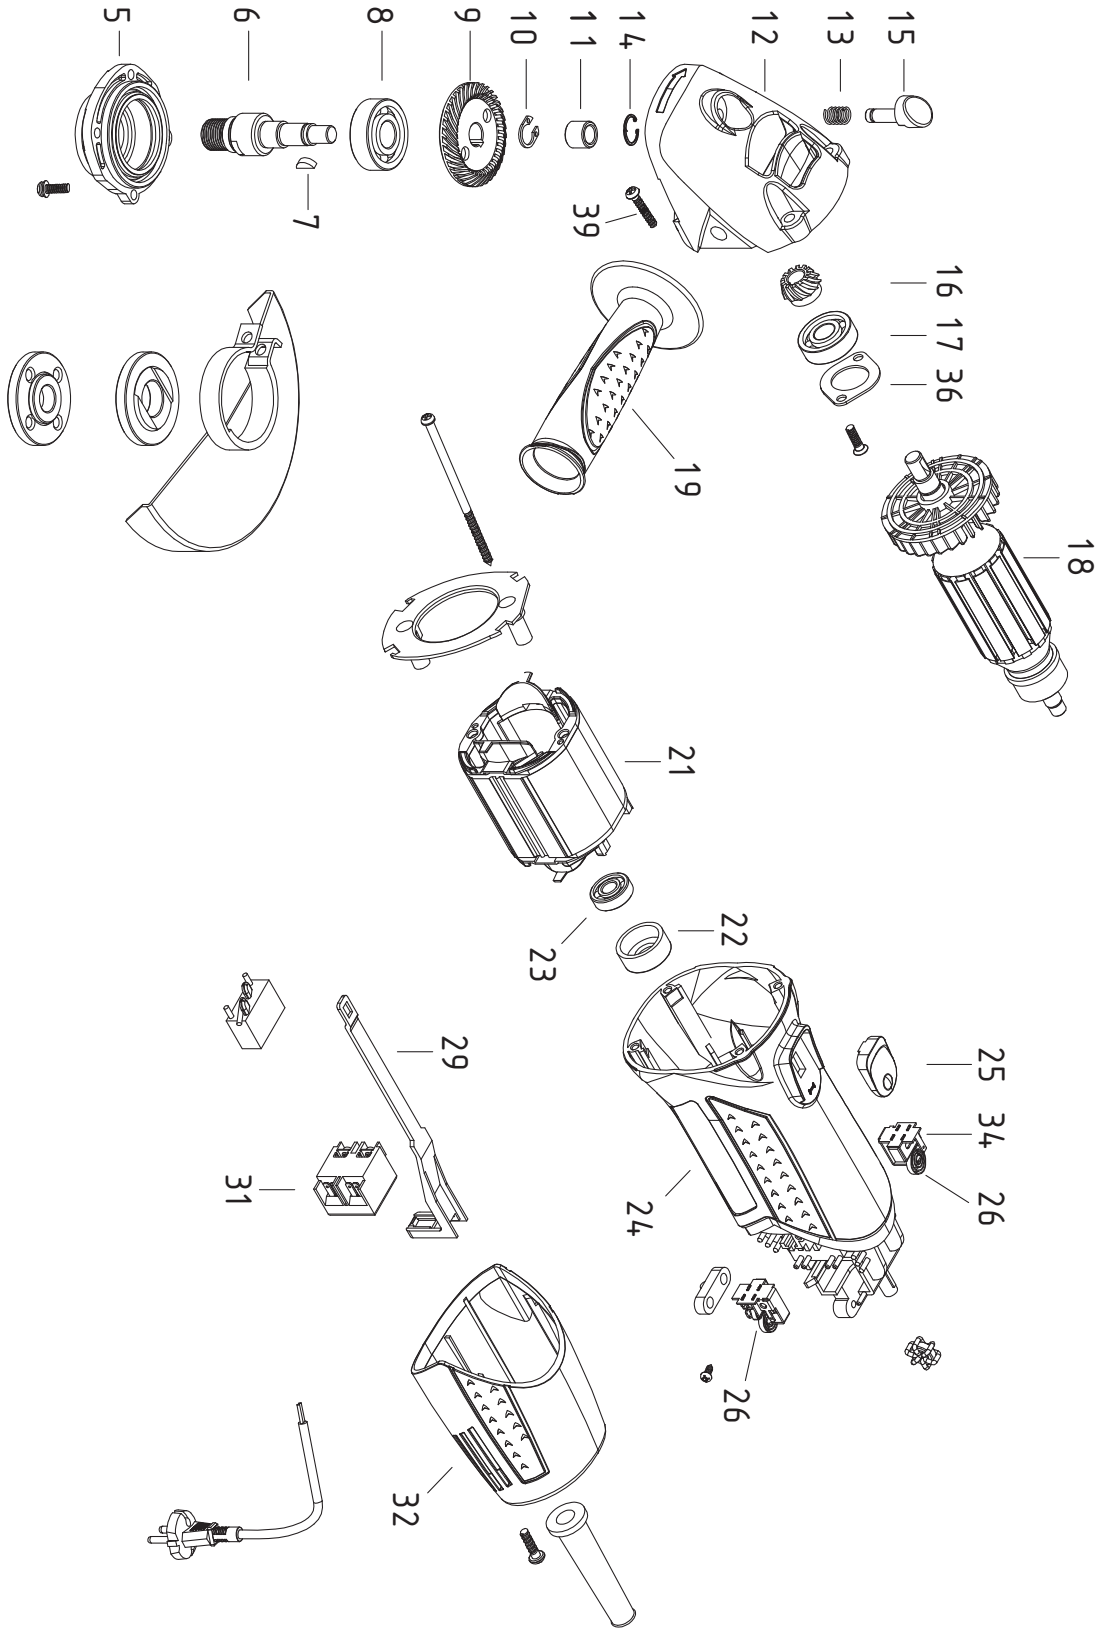

Spare parts list BWS-500-P

No.	Part Name	No.	Part Name
5	Forcecover	18	Armature
6	Spindle	19	Side handle
7	Semicircle Key	21	Stator
8	Bearing	22	Bearing Holder
9	Big Gear	23	Bearing
10	Circlip	24	Housing
11	Needle bearing	25	Switch button
12	Gear box	26	Set of brushes
13	Lock Spring	29	Switch draw bar
14	Checking ring	31	Switch
15	Self-locking pin	32	Rear cover
16	Small gear	34	Carbon brush holder
17	Bearing	36	Bearing cover