


Exploded view

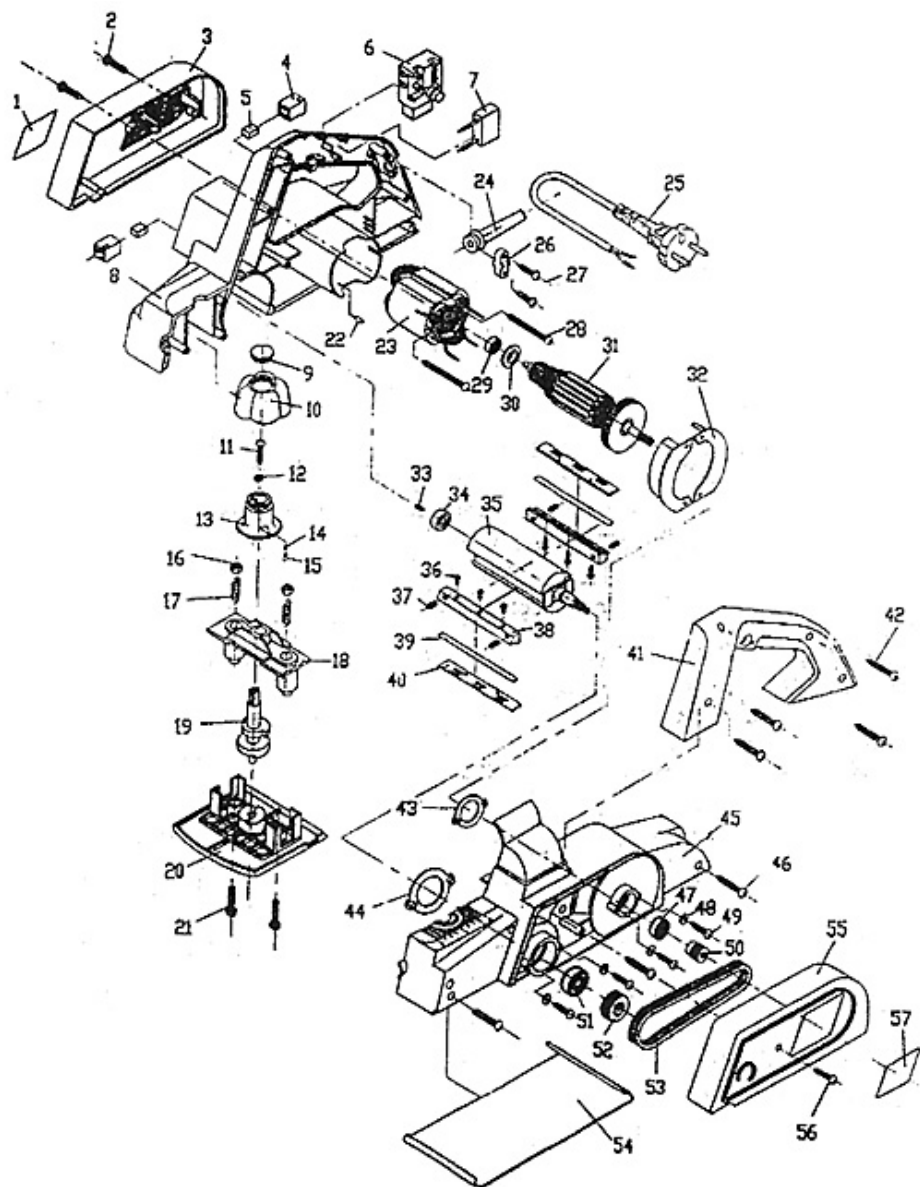

---

## Parts List

<b>No</b>	<b>Item</b>	<b>No</b>	<b>Item</b>
1	Sticker	31	rotor
2	Screw	32	air reflector
3	right cover	33	damping micelle
4	brush holder	34	bearing 608
5	Carbon brush	35	blade body
6	switch	36	screw on pressing board
7	capacitor	37	adjusting screw
8	Right housing	38	upper pressing board
9	cover	39	blade
10	adjusting cover	40	lower pressing board
11	Screw	41	left handle
12	washer	42	screw
13	adjusting knob	43	bearing guard
14	Small spring	44	bearing guard
15	setting sleeve	45	Left housing
16	nut	46	screw
17	spring	47	bearing 608
18	adjusting supporter	48	washer
19	adjusting pole	49	screw
20	adjusting plate	50	main wheel
21	Screw	51	bearing 6200
22	damping micelle	52	passive wheel
23	Stator	53	belt
24	cable sheating	54	base
25	cable	55	left cover
26	Cable Clamp	56	screw
27	Screw	57	sticker
28	Screw		
29	bearing 626		
30	insulation plate		