


# Exploded view

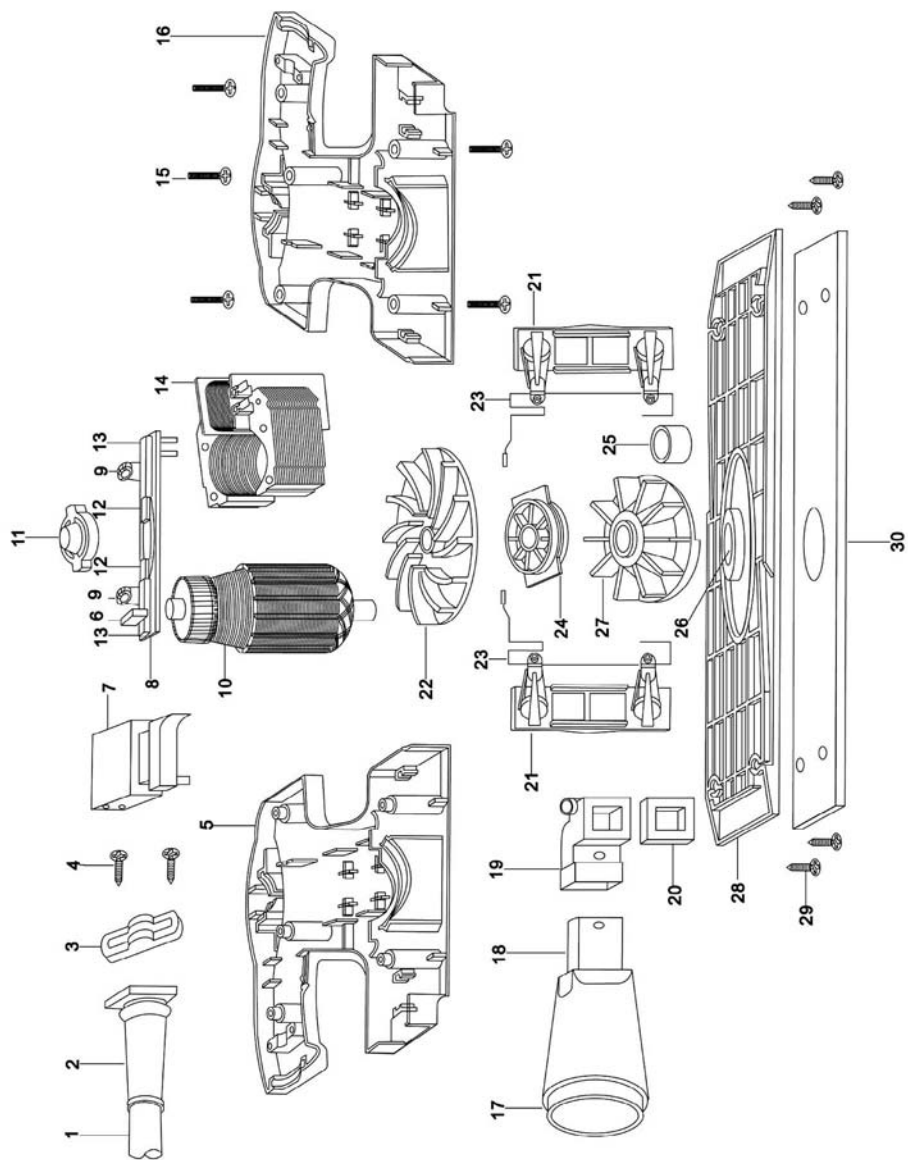

---

## Parts List

<b>Part No.</b>	<b>Spare Part name</b>
1	Cable and Plug
2	Cable Sheath
3	Cable Flange
4	Screw
5	Housing (below)
6	Capacitor
7	Switch
8	Circuit Board
9	Inductor
10	Rotor
11	Oil Bearing
12	Carbon Brush
13	Carbon Brush Holder
14	Stator
15	Screw
16	Housing (above)
17	Dust-absorbing Pipe
18	Dust-absorbing Tip
19	Dust-absorbing Holder
20	Cover Washer
21	Bracket
22	Plastic Fan
23	Steel Clamp
24	Oil Bearing
25	Bearing Sheath
26	Needle Bearing
27	Zinc Fan
28	Base Plate
29	Screw
30	Sponge