


Exploded view

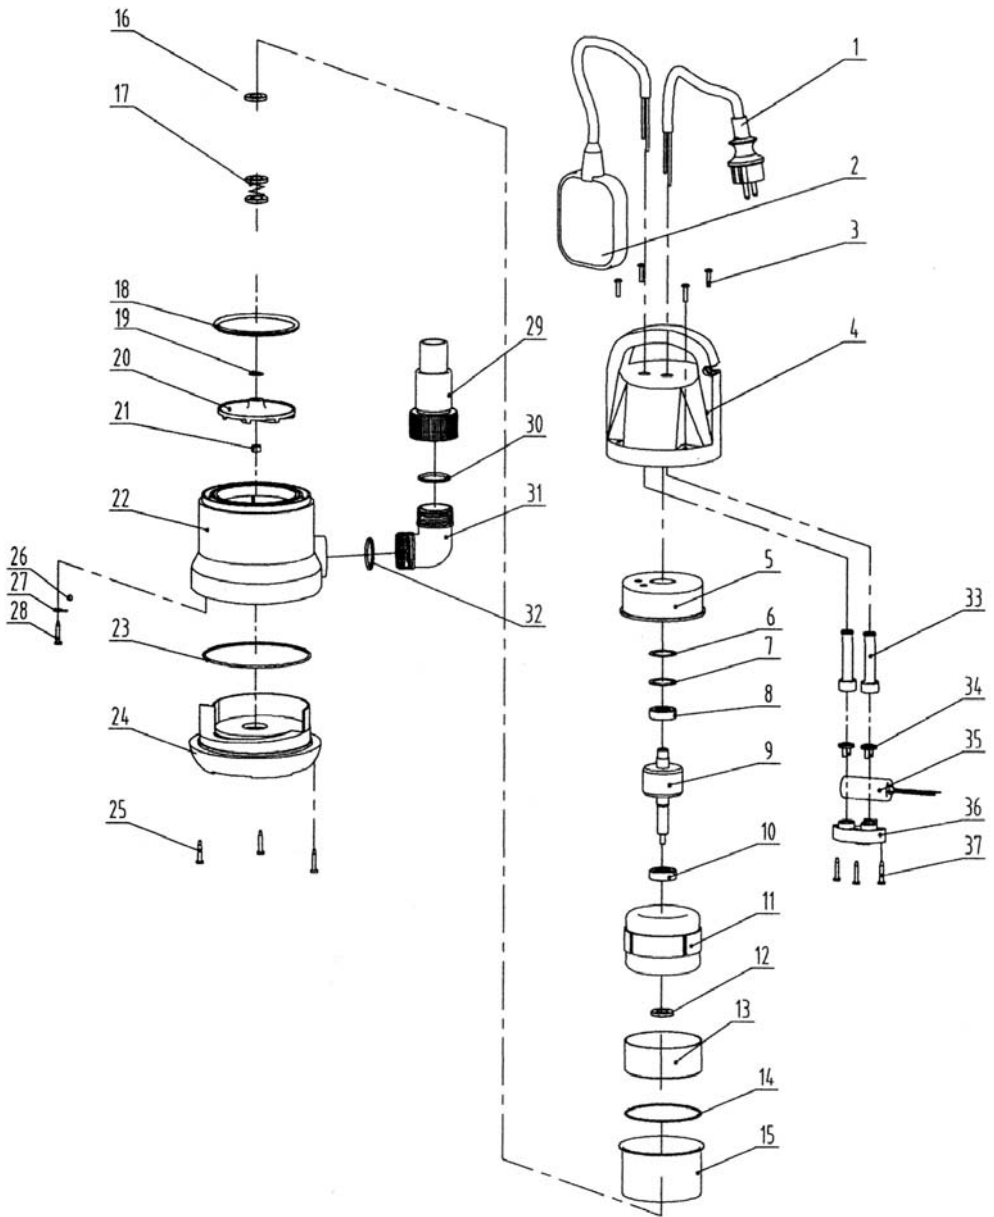

Spare parts list

Part No.	Description	Part No.	Description
1	cable and plug	20	impeller
2	switch	21	anti-off screw
3	screw	22	B type main pump housing
4	back pump housing	23	O type sealer 125X3
5	back motor housing	24	B type bottom frame
6	rippled busher	25	self-tapping screw
7	adjustable busher	26	steel ball
8	bearing	27	small busher
9	rotor	28	self-tapping screw
10	bearing	29	outer adaptor G1-1/2
11	stator	30	O type sealer 34.5X3
12	frame sealer	31	elbow G1-1/2
13	front motor sleeve	32	O type sealer 34.5X3
14	O type sealer 84.5X3.55	33	cable protecting sleeve
15	front motor cover	34	cable fixing screw
16	frame sealer	35	capacitor
17	mechanical sealer	36	cable fixing base
18	O type sealer 89X4.8	37	self-tapping screw
19	front adjustable busher		