


Exploded view DPW-1850

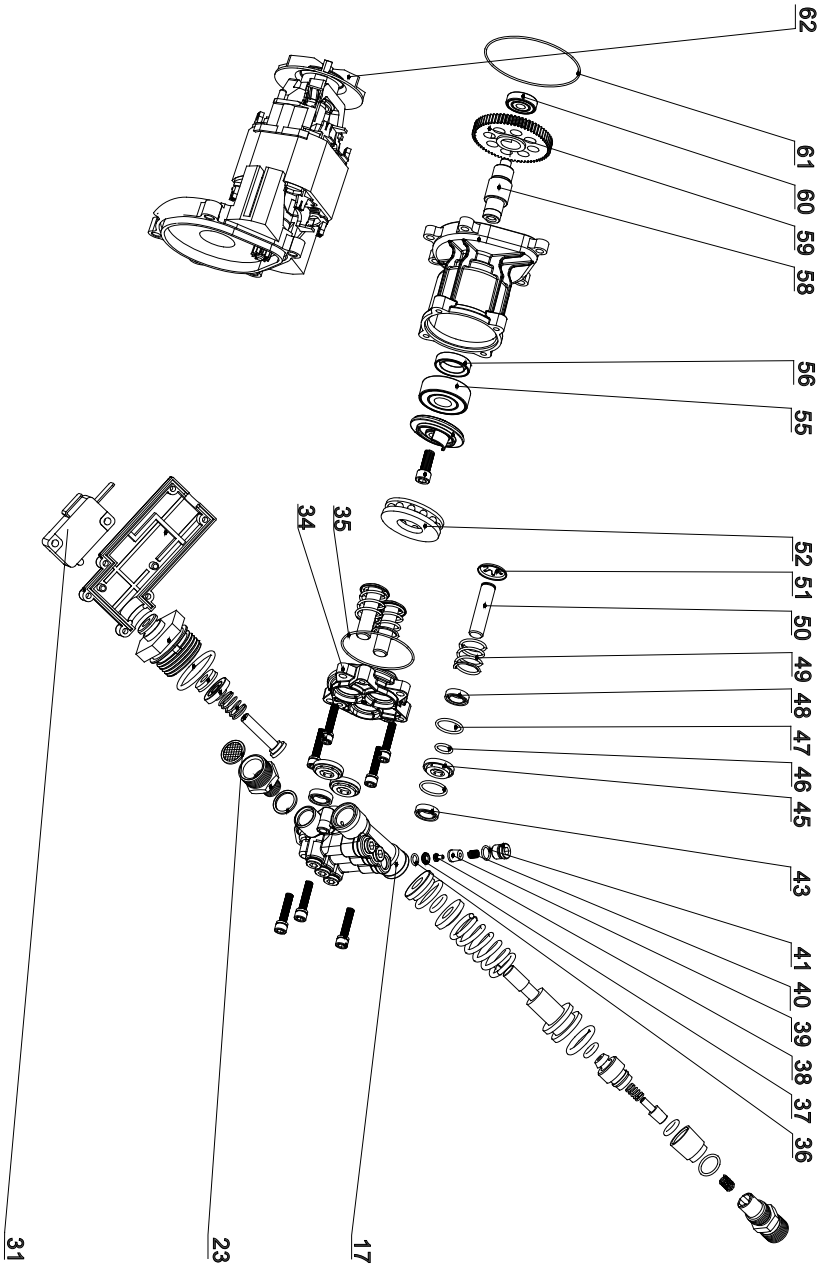

Spare parts list DPW-1850

No.	Part Name	No.	Part Name
17	Pump head	47	In the Interval sets
23	Strainer	48	Skeleton seal
31	Micro switch	49	Plunger spring
34	Pump	50	Plunger
35	O-ring 58x2,65	51	Plunger circlip
36	O-ring 10x1,5	52	Thrust ball bearings 51107B
37	Inlet and outlet valve seat	55	Bearings 6302
38	Inlet and outlet valve core	56	Seal
39	Inlet and outlet valve	58	Gear shaft
40	Inlet and outlet valve spring	59	Gear
41	O-ring 12x1,9	60	Bearings 629
43	Y-ring 20x12x5	61	O-ring 88x1,9
45	Middle sets	62	Motor
46	O-ring 16x1,9		