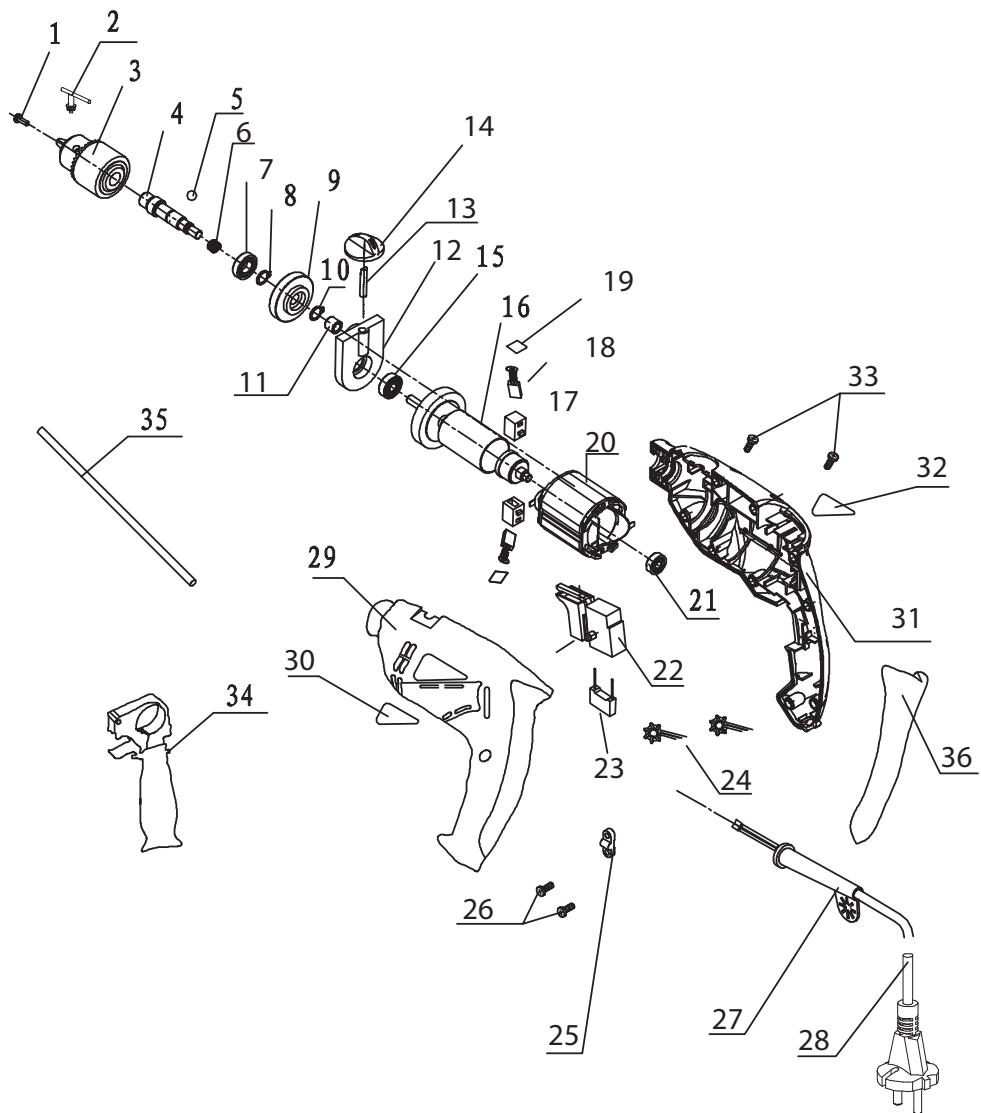

Exploded view DID-501-B



Spare parts list DID-501-B

No. Part Name

- 1 M5x20-LH screw
- 2 chuck key
- 3 chuck
- 4 output spindle
- 5 iron ball
- 6 spring
- 7 bearing
- 8 circlip
- 9 main gear
- 10 circlip
- 11 thread
- 12 impact parts
- 13 impact switch bar
- 14 impact switch
- 15 bearing
- 16 rotor
- 17 carbon brush holder
- 18 carbon brush
- 19 carbon brush cover
- 20 stator
- 21 bearing
- 22 on/off switch
- 23 capacitor
- 24 senser
- 25 wire fix cover
- 26 screw
- 27 cable protector
- 28 electric cable
- 29 left housing
- 30 right housing
- 32 brand label
- 33 screw
- 34 auxiliary handle
- 35 depth gauge
- 36 soft grip