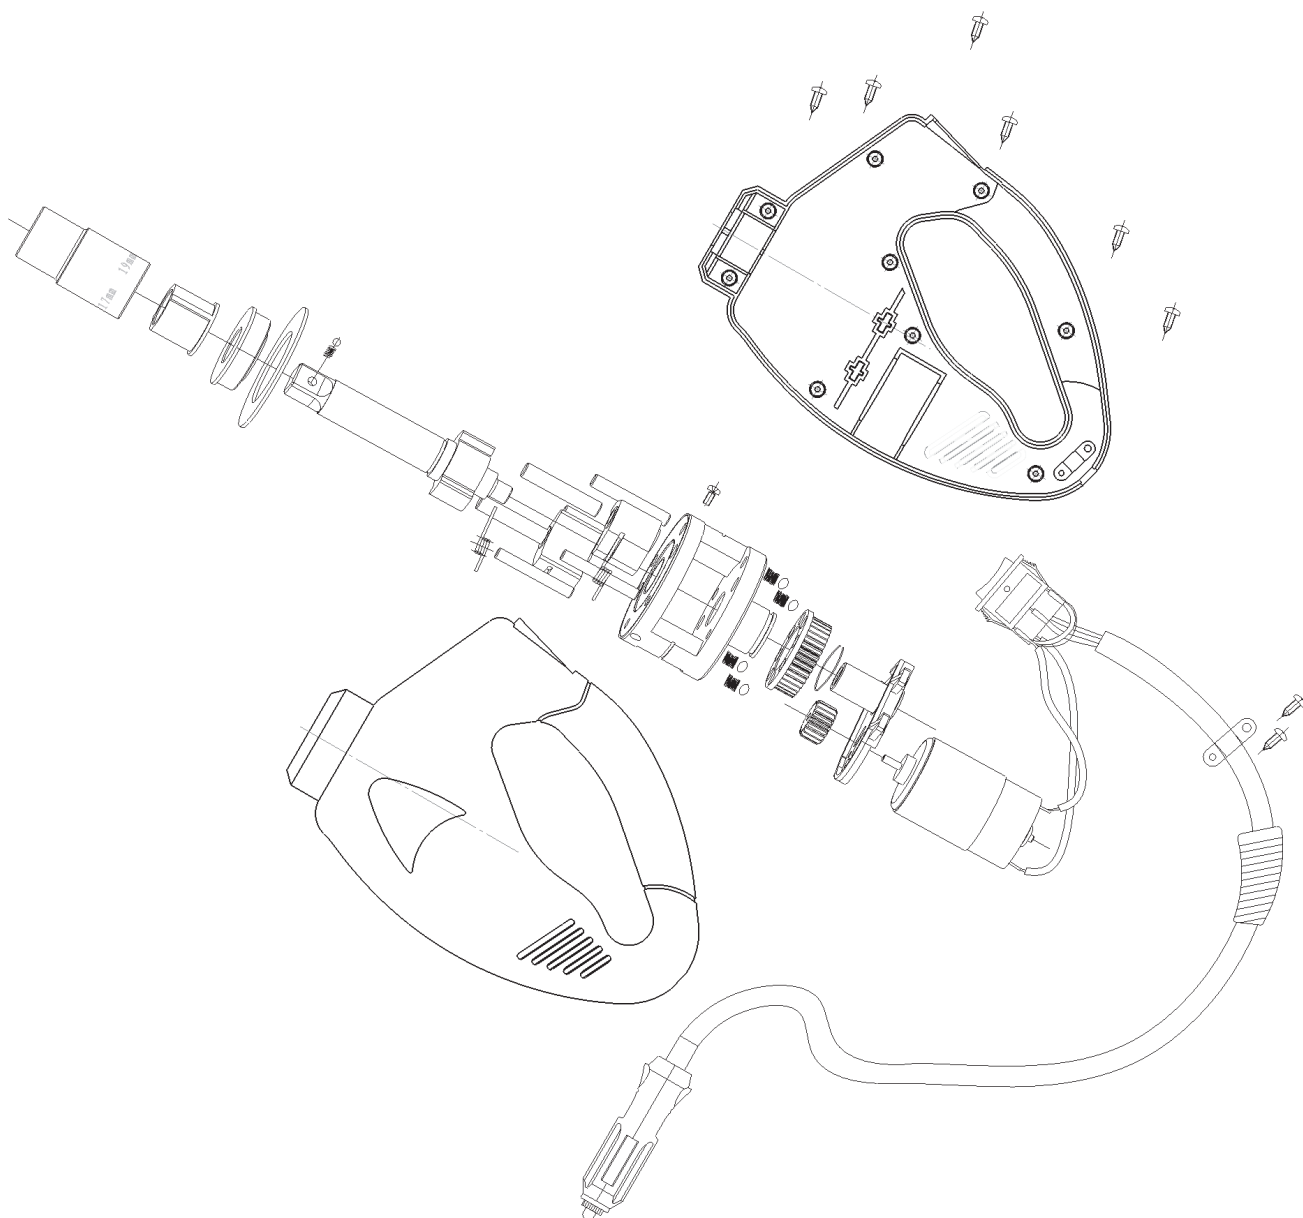

Exploded view DCW-12



Spare parts list DCW-12

- 1 socket 17/19 21/23
- 2 output sheath
- 3 flywheel bracket
- 4 baffle
- 5 spring
- 6 steel ball
- 7 output axis
- 8 wrest spring loose
- 9 7mm dowel
- 10 centrifugal black (L)
- 11 5mm dowel

- 12 6mm dowel
- 13 wrest spring tight(T)
- 14 centrifugal black(T)
- 15 screw
- 16 fly wheel
- 17 spring
- 18 steel ball
- 19 big gear
- 20 spin
- 21 small gear
- 22 motor bracket
- 23 motor
- 24 switch
- 25 inner wire
- 26 cable
- 27 cable fixed black
- 28 cable jacket
- 29 right house
- 30 left house
- 31 screw
- 32 screw
- 33 screw
- 34 cigarette plug