


Exploded view DGT-1010N

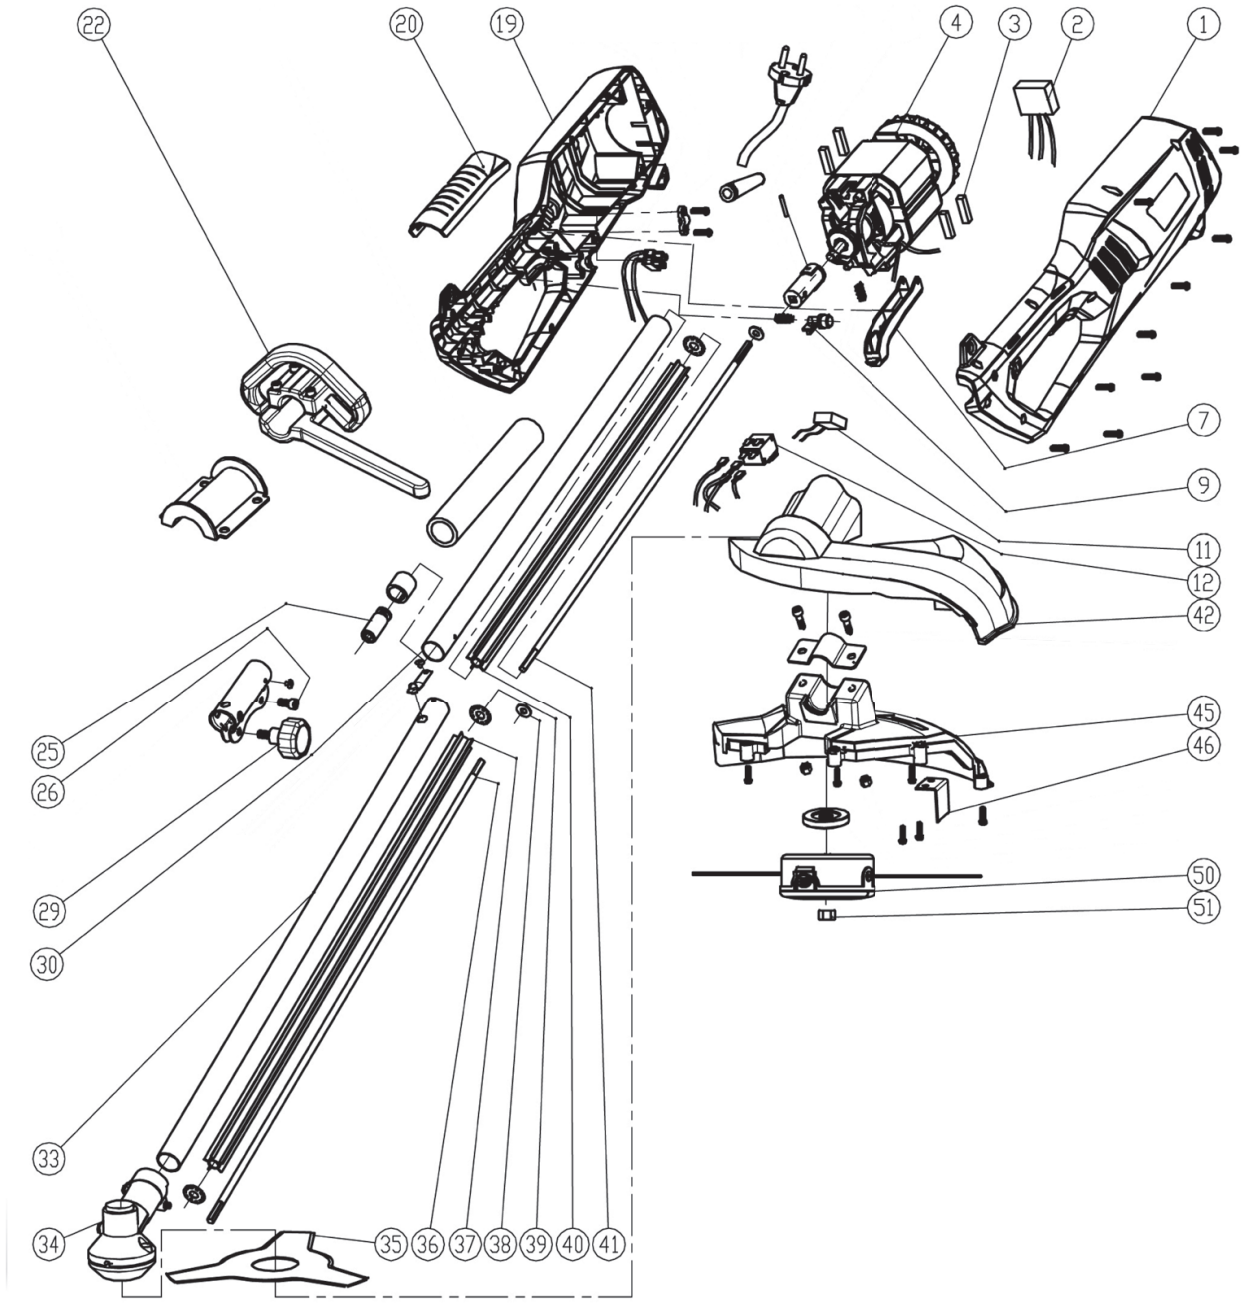

Spare parts list DGT-500N

No.	Part Name	No.	Part Name
1	Housing left	33	Tube bottom
2	Soft Start	34	Gear box assy
3	Rubber bearing sleeve	35	Blade
4	Motor	36	Shaft bottom
7	Button switch	37	Shaft sleeve bottom
9	Lock switch	38	Clutch
11	Capacitor	39	Clutch
12	Switch	40	Shaft sleeve upper
19	Housing right	41	Shaft upper
20	Soft cover housing	42	Soft cover cover
22	Handle auxiliary	45	Cover protective
25	Shaft flexible	46	Blade guard
26	Bolt	50	Reel assy
29	Knob fixing	51	Nut spindle
30	Tube upper		